MADJAX

Part # 03-006
Roof Rack

(will fit Yamaha® Drive®)

ITEMS INCLUDED	TOOLS NEEDED

- Mounting Brackets
- Roof Rack
- Hardware Pack

- Cordless Drill
- 5/16" Drill Bit
- 13mm Socket
- 13mm Wrench

Mounting Brackets

Roof Rack

WARNING: Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.
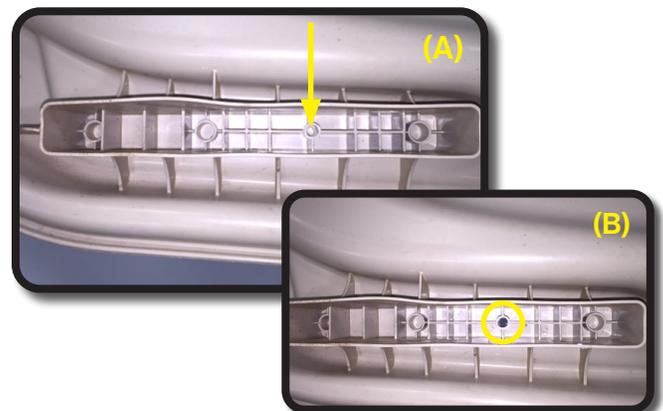
STEP 1

Remove factory canopy and place upside down on table/saw horses. Retain hardware.

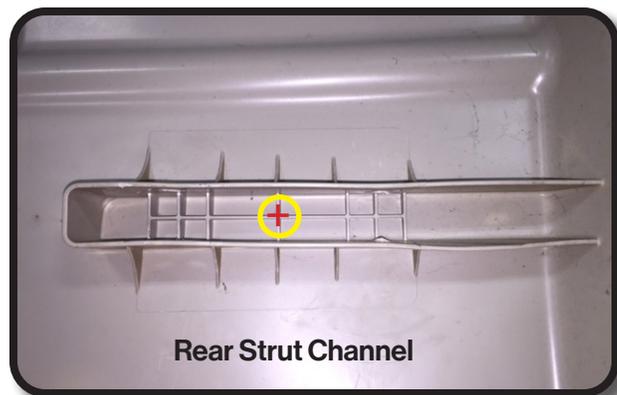
STEP 2

A) At the front strut channels locate smallest circle as shown.

B) Using a 5/16" bit, drill through canopy at this location.

(A)

(B)

STEP 3

At rear strut channels locate center cross section as shown. Using a 5/16" bit, carefully drill through canopy at center point of cross section as shown.

Rear Strut Channel

STEP 4

Re-attach factory top using retained hardware from step 1. Using the new holes in canopy drill through struts using 5/16" bit.
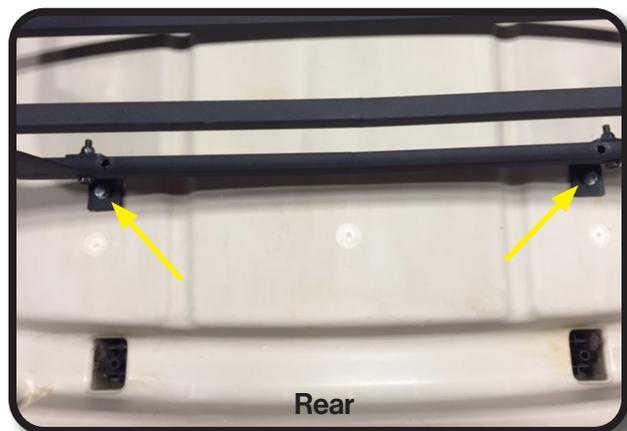

Rear Shown

STEP 5

Attach mounting brackets to roof rack as shown with slotted hole attaching to canopy. Use 8mm x 35mm bolts but do not completely tighten.
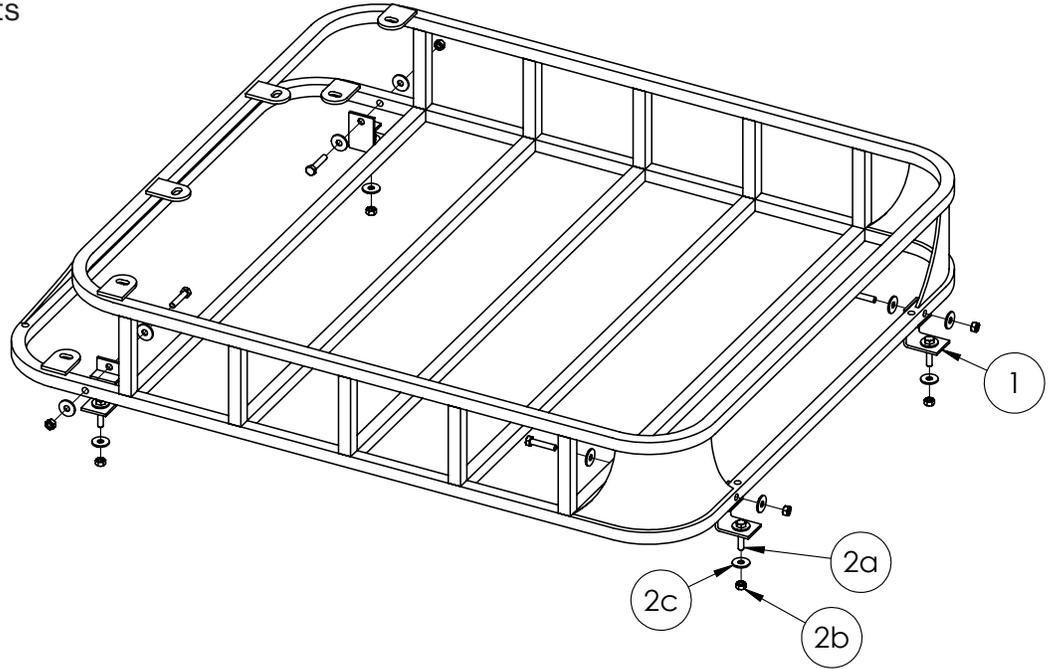
Front Driver Side

STEP 6

Attach brackets to struts through canopy using 8mm x 60mm bolts. Once all four bolts are in place, tighten all hardware.

Rear

(Dacromet Coated)

- 4 - 8mm x 35mm Hex head bolts
- 4 - 8mm x 60mm Hex head bolts
- 16 - 8mm Flat washers
- 8 - 8mm Nylock Nuts

INSTALLATION COMPLETE