

MADJAX


Part # 14-003 Side Step Brackets

(Will fit Yamaha® Drive 2®)



ITEMS INCLUDED

- Driver & Passenger Mounting Brackets
- U-Bolts
- Hardware Pack
 - 2- Square U-Bolts 10mm x 40mm x 104mm
 - 1- Square U-Bolts 10mm x 68mm x 110mm
 - 1- Square U-Bolts 10mm x 58mm x 110mm
 - 8- 10mm x 55mm hex bolts
 - 24- 10mm flat washers
 - 16- 10mm lock nuts

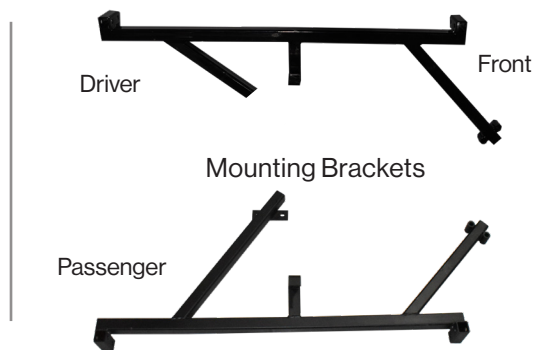

WARNING:


Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

Note: This kit will require the QuieTech® EFI motor cover to be discarded to complete install.

STEP 1


(A) Place smaller U-Bolt (M10x40mm) over front of frame as shown.

(B) Place larger U-Bolt over center frame cross member located directly under the front of the battery well.

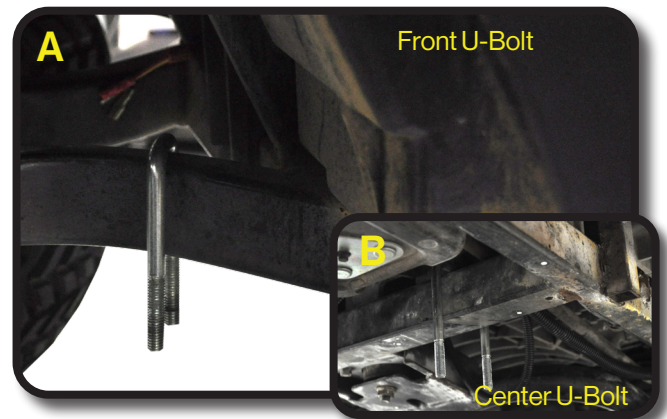


STEP 2

Place bracket under frame with the tab in picture hooked to top of frame directly behind pedal box.

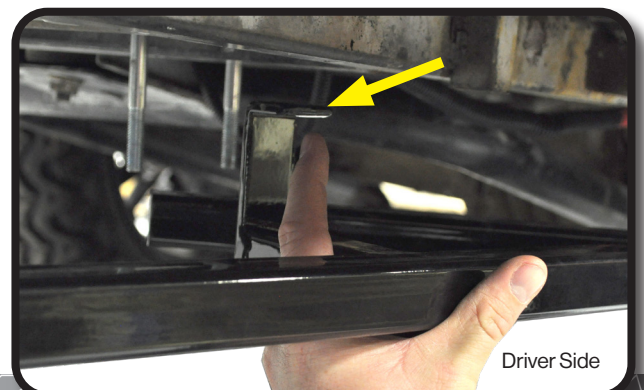

STEP 3

Guide U-Bolts through bracket and hand tighten supplied hardware.

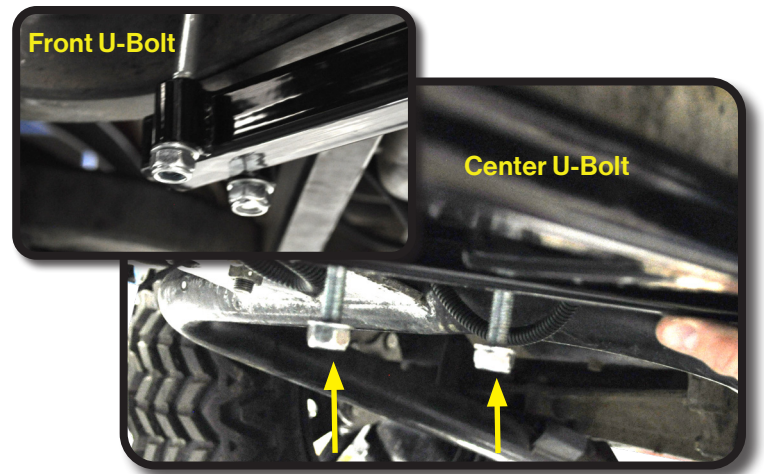

STEP 4


Using a 17mm socket, tighten U-Bolt hardware on front and center locations. Be sure hardware is tightened evenly.



STEP 5

Using the 10mm x 55mm hardware attach step to bracket with 17mm socket and wrench. Once all 4 bolts are in place then tighten.

Repeat Steps 1-5 on other side.

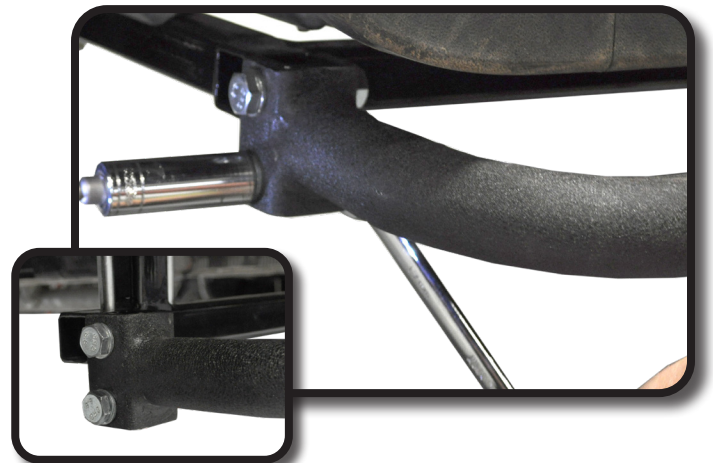

INSTALLATION COMPLETE

Yamaha Drive2™ is a registered trademark of Yamaha Golf-Car Company and Yamaha Motor Corporation (“Yamaha”). Reference to Yamaha’s trademarks and products is only for the purposes of identifying golf carts with which is this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated or sponsored by Yamaha Motor Corporation or Yamaha Golf-Car Company.