



14-004

SIDE STEP BRACKETS

WILL FIT CLUB CAR® PRECEDENT®



INSTALLATION INSTRUCTIONS

INCLUDED:

U-Bolts
Mounting Bracket's
Hardware Pack

TOOLS NEEDED:


Cordless Drill
17mm Socket
17mm Wrench
13mm Socket

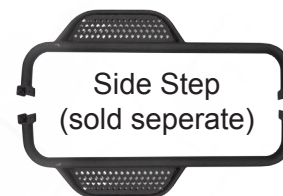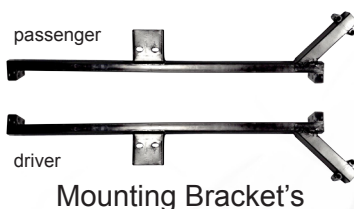

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1

Remove and retain factory nuts under frame using 13mm socket as shown.

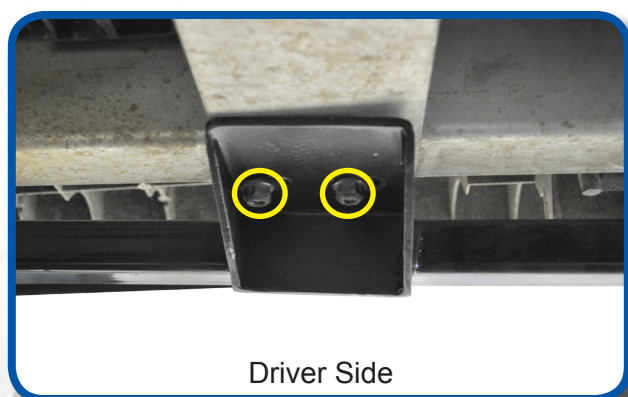

Place mounting bracket to frame with angled section towards the front. Hand tighten retained hardware. **DO NOT** tighten completely until end of installation. The U-bolt still needs to be inserted at front of bracket.


2

Place U-bolt over front frame and into bracket as shown. Hand tighten nuts and washers.

Driver Side




Driver Side

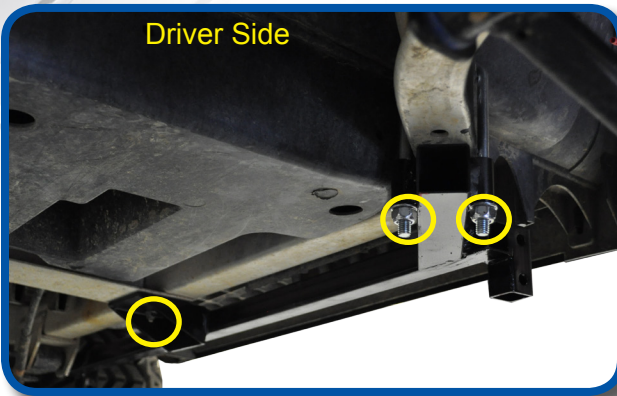

Now that all mounting hardware is in place, tighten all hardware, be sure that U-bolt is tightened evenly as shown.

Attach side step to mounting bracket using 10mm x 55mm bolts. DO NOT tighten until all 4 bolts are in place.

REPEAT STEPS 1-5 on passenger side

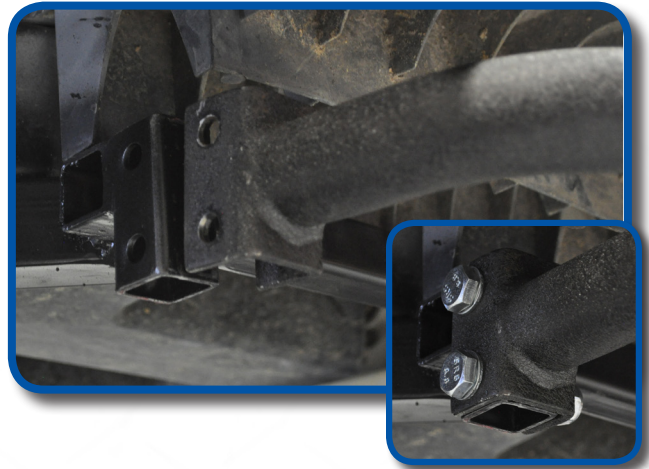

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.

HARDWARE PACK


Pack 1

- 2 – Square U-bolts 10mm x50mm x135mm
- 8 – 10mm x 55mm Hex head bolts.
- 20 – 10mm flat washers
- 12 – 10mm lock nuts

14-004 - PRECEDENT NERF BAR BRACKETS (GOES w/ 14-001 MJFX ARMOR DROP DOWN SIDE STEP NERF BARS)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

DIAGRAM SHOWS PASSENGER SIDE BRACKET
(DRIVER SIDE BRACKET IS MIRROR IMAGE)

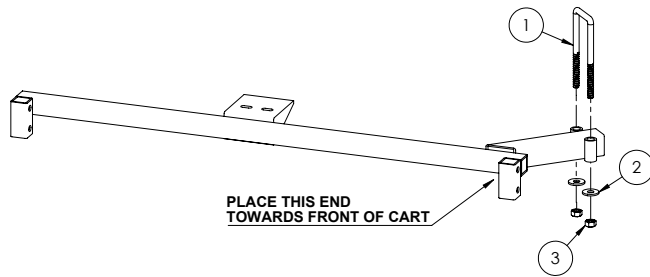

14-001 - MJFX ARMOR NERF BARS w/ DROP DOWN SIDE STEP (TEXTURED MATTE BLACK)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

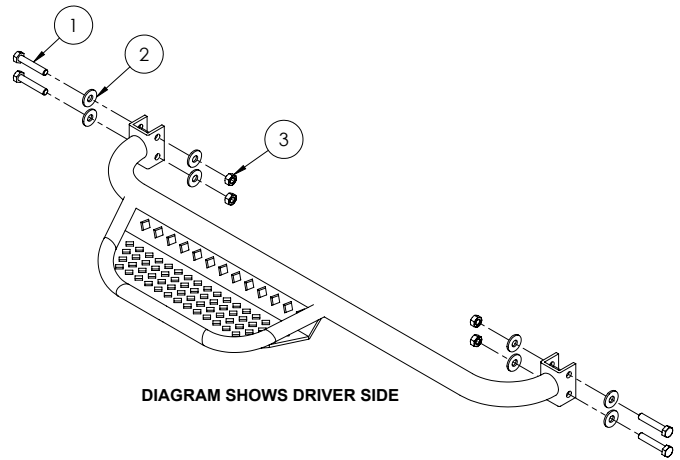


DIAGRAM SHOWS DRIVER SIDE

