



14-005


SIDE STEP BRACKETS

WILL FIT CLUB CAR® DS®

INSTALLATION INSTRUCTIONS

INCLUDED:
Mounting Bracket's
U-Bolts
Hardware Pack

TOOLS NEEDED:
Cordless Drill
17mm Socket
17mm Wrench

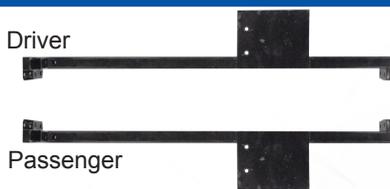

Mounting Bracket's





Side Step
(sold sepearate)

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1

Place U-Bolts over frame in the two locations shown.

Note: square U-Bolts goes over frame in battery box

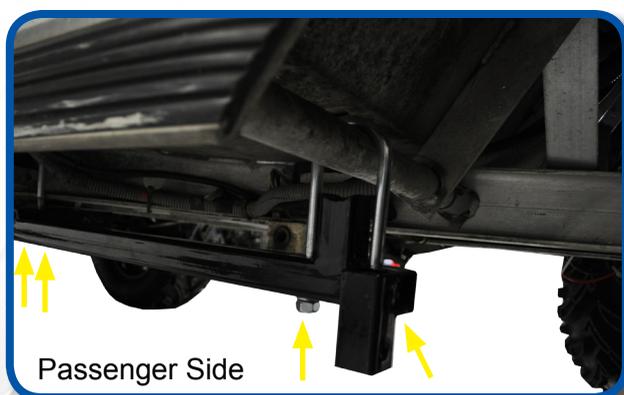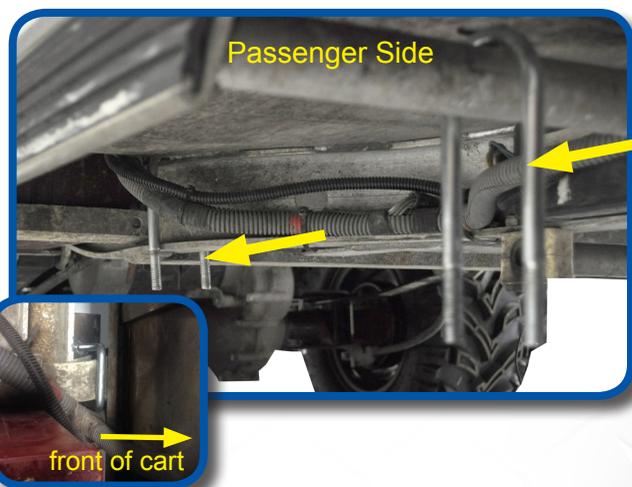

2
Using supplied hardware hand tighten brackets to U-Bolts as shown. **DO NOT TIGHTEN HARDWARE.**


Using a tape measure and marking pen, measure 7" from bracket to outside of cart and mark location of bracket. This mark will be the guide to attaching bracket in correct location. For the rear this will not be needed. Front only.



Tighten all U-Bolt hardware with 17mm socket.*Be sure to tighten all U-bolts evenly.

Using the 10mm x 55mm hardware attach step to bracket with 17mm socket and wrench. Once all 4 bolts are in place then tighten.

**Repeat steps 1-5 on other side.*

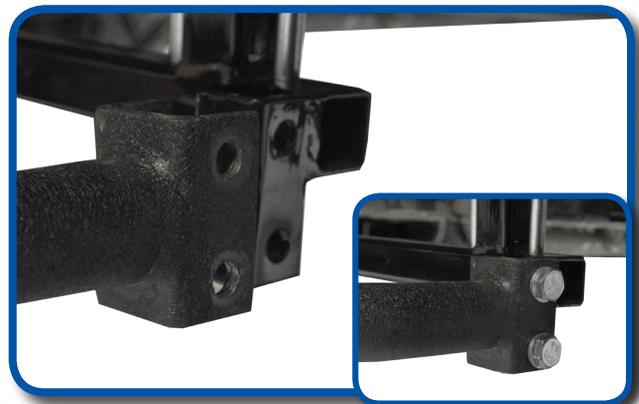

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.

HARDWARE PACK


Pack 1

- 2- Square U-Bolts 10mm x 45mm x 133mm
- 2- U-Bolts 10mmx45mmx133mm
- 8- 10mmx55mm hex head bolts
- 24- 10mm flat washers
- 16- 10mm lock nuts

14-005 - DS NERF BAR BRACKETS
(GOES w/ 14-001 MJFX ARMOR DROP DOWN SIDE STEP NERF BARS)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

DIAGRAM SHOWS PASSENGER SIDE BRACKET
(DRIVER SIDE BRACKET IS MIRROR IMAGE)

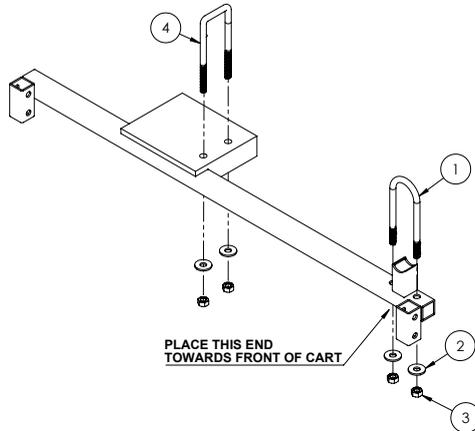

14-001 - MJFX ARMOR NERF BARS w/ DROP DOWN SIDE STEP
(TEXTURED MATTE BLACK)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

