



14-008


SIDE STEP BRACKETS

WILL FIT YAMAHA® DRIVE®

INSTALLATION INSTRUCTIONS

INCLUDED:
Mounting Bracket's
U-Bolts
Hardware Pack



TOOLS NEEDED:
Cordless Drill
17mm Socket
17mm Wrench

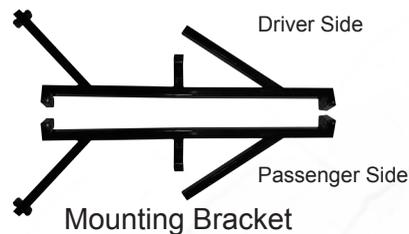

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1
(A) Place smaller U-Bolt over front of frame as shown.

(B) Place larger U-Bolt over frame located directly under the front of the battery well.

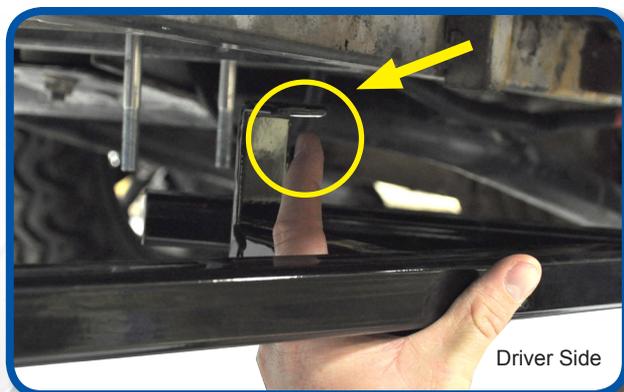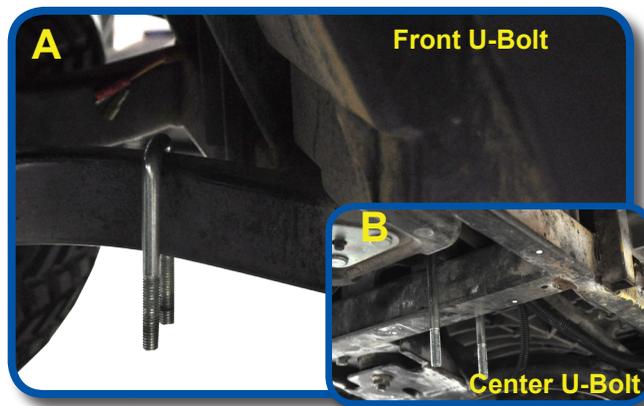

2
Place bracket under frame with the tab in picture hooked to top of frame directly behind pedal box.

3
Guide U-Bolts through bracket and hand tighten supplied hardware.

Front U-Bolt

Center U-Bolt



4
Using a 17mm socket, tighten U-Bolt hardware on front and center locations. Be sure hardware is tightened evenly.

5
Using the 10mm x 55mm hardware attach step to bracket with 17mm socket and wrench. Once all 4 bolts are in place then tighten.

**Repeat steps 1-5 on other side.*



INSTALLATION COMPLETE

VISIT WWW.MYMAJAX.COM FOR MORE INSTALLATION VIDEOS.

*E-Z-GO®, E-Z-Go® TXT®, E-Z-Go® FREEDOM TXT®, E-Z-Go® CUSHMAN® and E-Z-Go® RXV® are registered trademarks of Textron Innovations, Inc. Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company. Any reference to Club Car®, E-Z-Go®, or Yamaha® or their associated trademarks, word marks, and products are only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by either Textron Innovations, Inc., Ingersoll Rand, Inc., Yamaha Golf Cart Company, or any of their parent or subsidiary companies.


HARDWARE PACK

- 2- Square U-Bolts 10mm x 40mm x 104mm
- 2- Square U-Bolts 10mm x 68mm x 100mm
- 8- 10mm x 55mm hex bolts
- 24- 10mm flat washers
- 16- 10mm lock nuts

14-008 - YAMAHA DRIVE NERF BAR BRACKETS (GOES w/ 14-001 MJFX ARMOR DROP DOWN SIDE STEP NERF BARS)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

DIAGRAM SHOWS DRIVER SIDE BRACKET
(PASSENGER SIDE BRACKET IS MIRROR IMAGE)

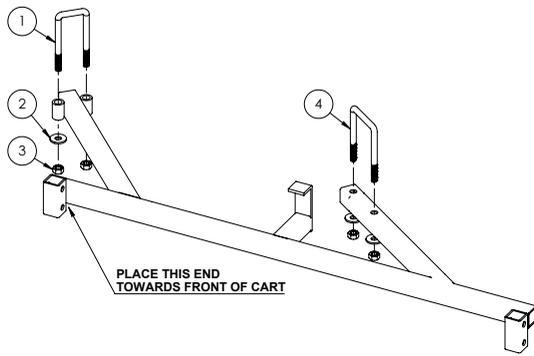

14-001 - MJFX ARMOR NERF BARS w/ DROP DOWN SIDE STEP (TEXTURED MATTE BLACK)

WARRANTY PARTS
EXPLODED VIEW DIAGRAM

