



**BRUSH GUARD**  
WILL FIT E-Z-GO® RXV™  
**INSTALLATION INSTRUCTIONS**  
14-009 (BLACK) 14-010 (STAINLESS)

- INCLUDED:**  
MADJAX BRUSH GUARD  
2 UPPER MOUNTING BRACKETS  
LOWER MOUNTING BRACKET



Brush Guard




Upper Mounting Brackets



Lower Mounting Bracket

1  
Attach upper mounting brackets to brush guard using hardware provided.

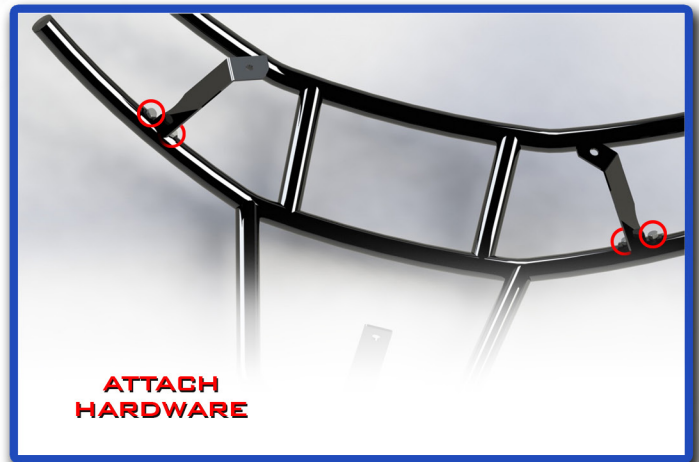

2  
Attach lower mounting bracket to brush guard using hardware provided.



Remove factory bolts located under cowl on driver side and passenger side.

3

Using retained factory hardware from step 3, attach brush guard.

4



Locate the hole under the cart between the frame to mount the bottom portion of brush guard. Using supplied hardware, attach bottom portion of brush guard as shown.

5



## BRUSH GUARD HARDWARE PACK

- (5) SHOULDER HEX BOLTS (BRACKET MOUNTING HARDWARE)
- (1) 10MM X 25MM SHOULDER HEX BOLT
- (2) 10MM X 2MM WASHERS
- (1) 10 MM ANTI-SLIP NUT