

# MADJAX

Part # 14-031  
**BRUSHGUARD**  
Will fit Yamaha® Drive 2®



## INSTALLATION INSTRUCTIONS

### TOOLS NEEDED

12mm Wrench  
12 Socket

### ITEMS INCLUDED



Brushguard

We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.


## STEP 1

Switch key to OFF position, and set the parking Brake




## STEP 2

To remove the bumper, use a 12mm Socket and Wrench then remove/retain the 4 bolts holding it to the frame.

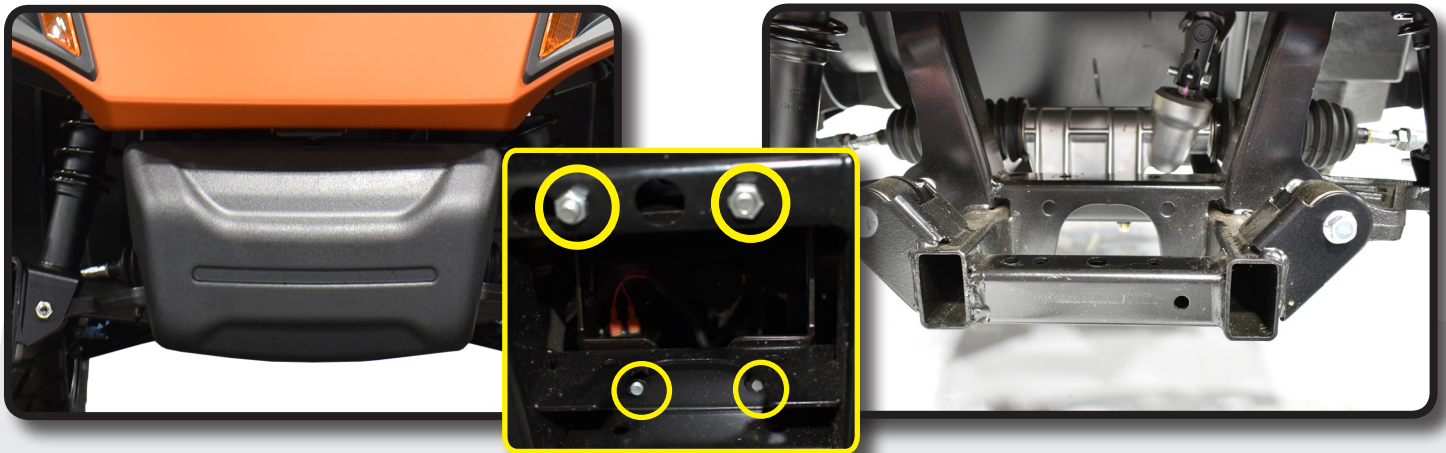

## STEP 3

Using retained hardware, install brushguard to the O.E.M bumper mounting position. Secure hardware.

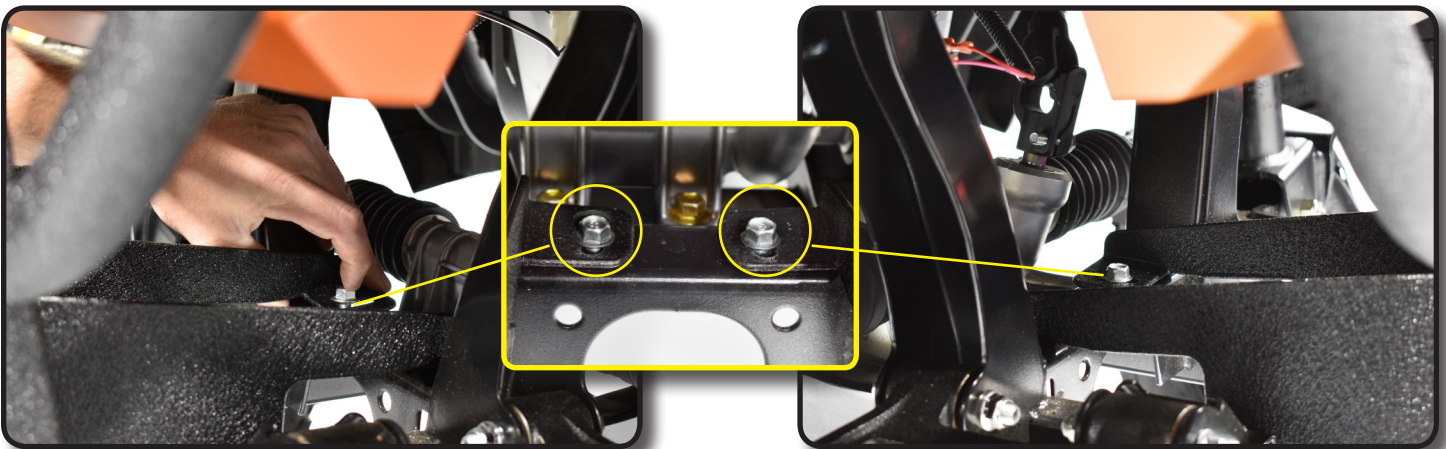

# INSTALLATION COMPLETE

Yamaha®, Yamaha® Drive®, G-14®, G-16®, G-19®, and G-22® are registered trademarks of Yamaha Golf-Car Company ("Yamaha"). Reference to Yamaha®, Yamaha® Drive®, any of the G-Series of Golf Carts, or any of Yamaha's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Yamaha or any of its parent or subsidiary companies.