




**14-038**  
**RECON STEP BAR**  
INSTALLATION INSTRUCTIONS  
*(BRACKETS SOLD SEPARATELY)*

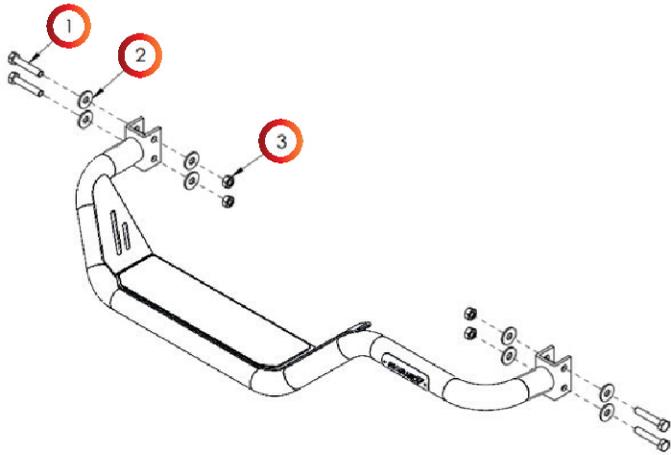

**HARDWARE INCLUDED**

1. (8) M10 x 55mm Hex Bolts
2. (16) M10 Washers
3. (8) M10 Lock Nuts

**TOOLS NEEDED**

- 17mm Socket
- 17mm Wrench

**STEP 1:**




Make sure mounting brackets (sold separately) are installed before beginning Recon Step Bar installation.

Using the M10 x 55mm hardware from the Step Bar, attach step to bracket with 17mm socket and wrench.

Make sure all (4) bolts are in place, then tighten.

**REPEAT ON THE OTHER SIDE.**

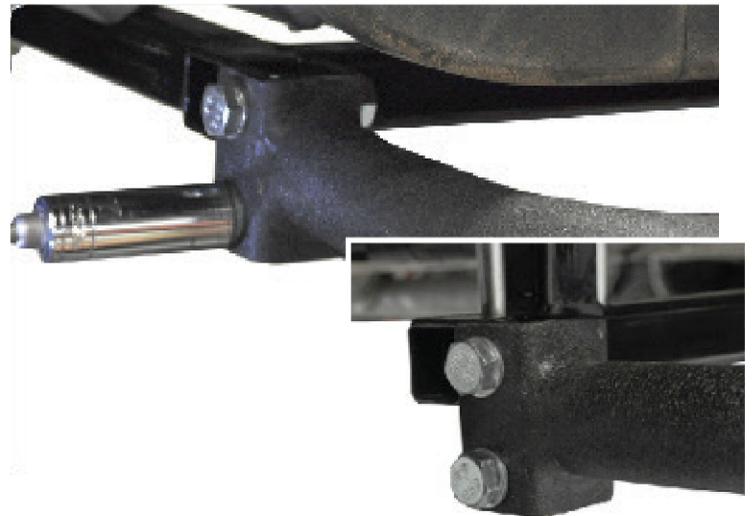

**INSTALLATION COMPLETE**

**WARNING: WE RECOMMEND PROFESSIONAL INSTALLATION. IF YOU CHOOSE TO NOT HAVE THIS PRODUCT INSTALLED BY A PROFESSIONAL, WE HIGHLY RECOMMEND THAT YOU EXERCISE CAUTION, CARE, AND PATIENCE WHEN INSTALLING THIS PRODUCT.**